


HINGE OFFSET: HOW TO MEASURE

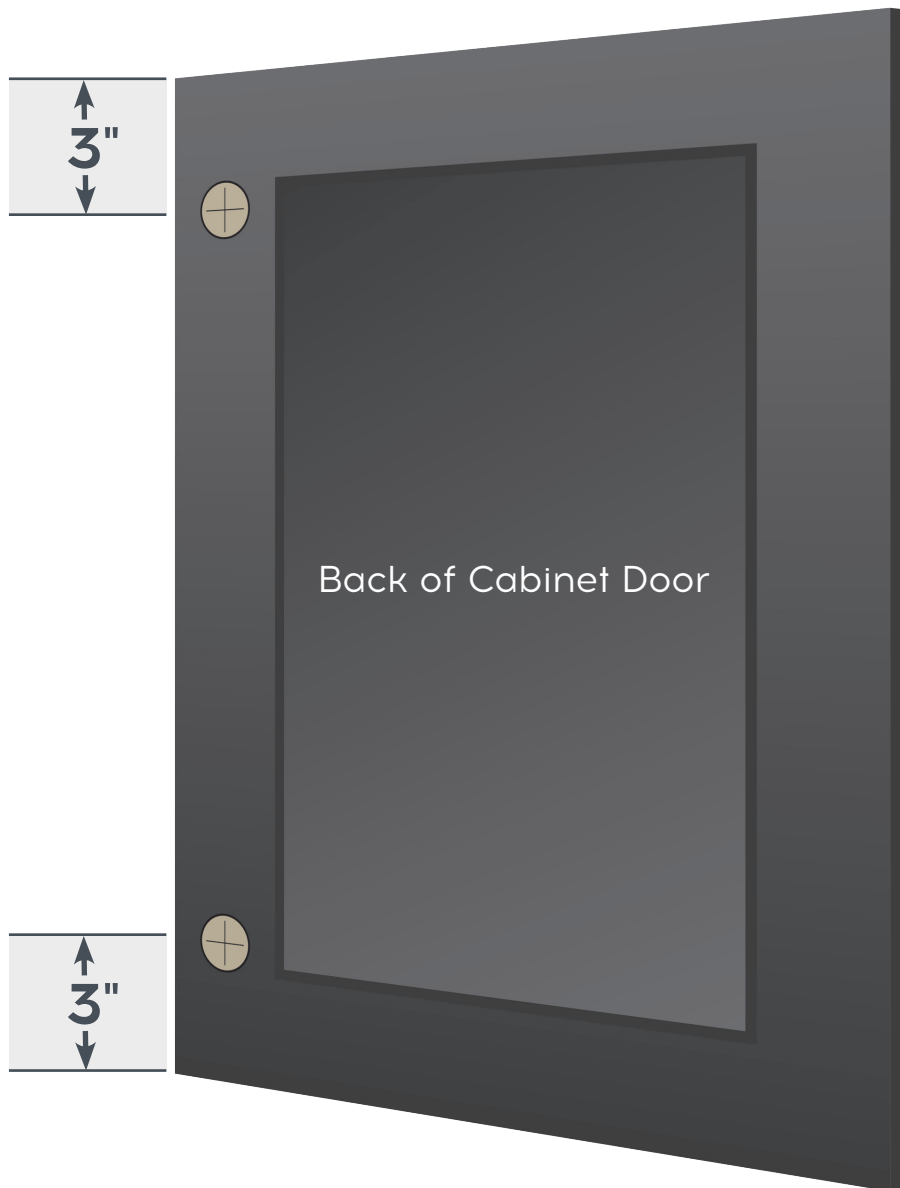

Measure the distance from the bottom & top of the cabinet to the MIDDLE of the bore hole. Standard is 3" offset.